



VW MK7 GOLF GTE 1.4TSI

DUMP VALVE & FITTING KIT

**PLEASE NOTE FITTING PICTURES MAY VARY SLIGHTLY
BETWEEN MODELS .**

TOOLS NEEDED:

Hose clamp driver

Posi drive screwdriver


M6 Allen key

Hose clamp pliers


1. Using hose clamp pliers remove the clamp that connects the cold air feed to the airbox and also the airbox to the inlet hose as pictured below.



2. Now remove the inlet hose from the slam panel by pushing down on the retaining clips as pictured below.

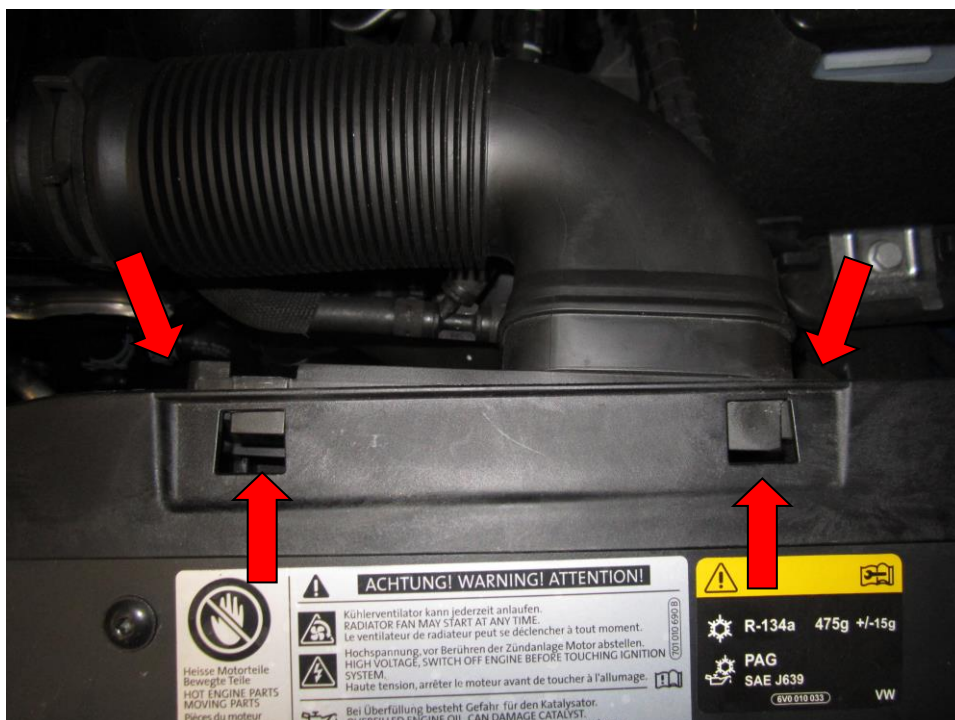


3. Remove the pipe from the airbox to the cam cover breather.

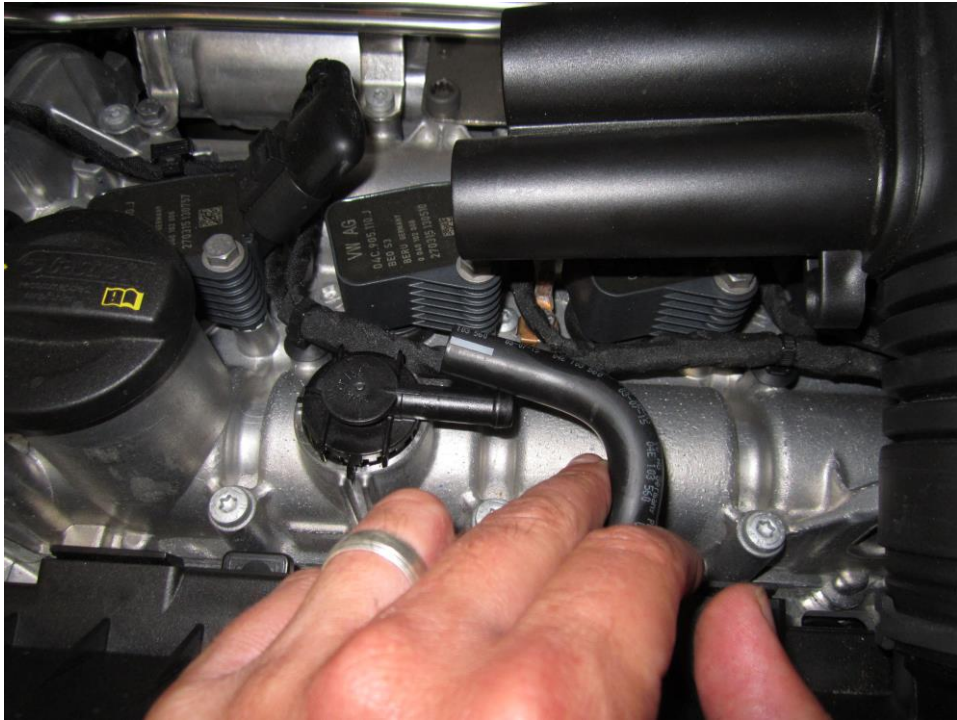


4. Now by pulling upwards in a sharp movement, remove the airbox .


5. Unclip the wiring loom from the map sensor on the boost pipe. Then by prying the arrowed red tabs outwards, remove the sensor completely.

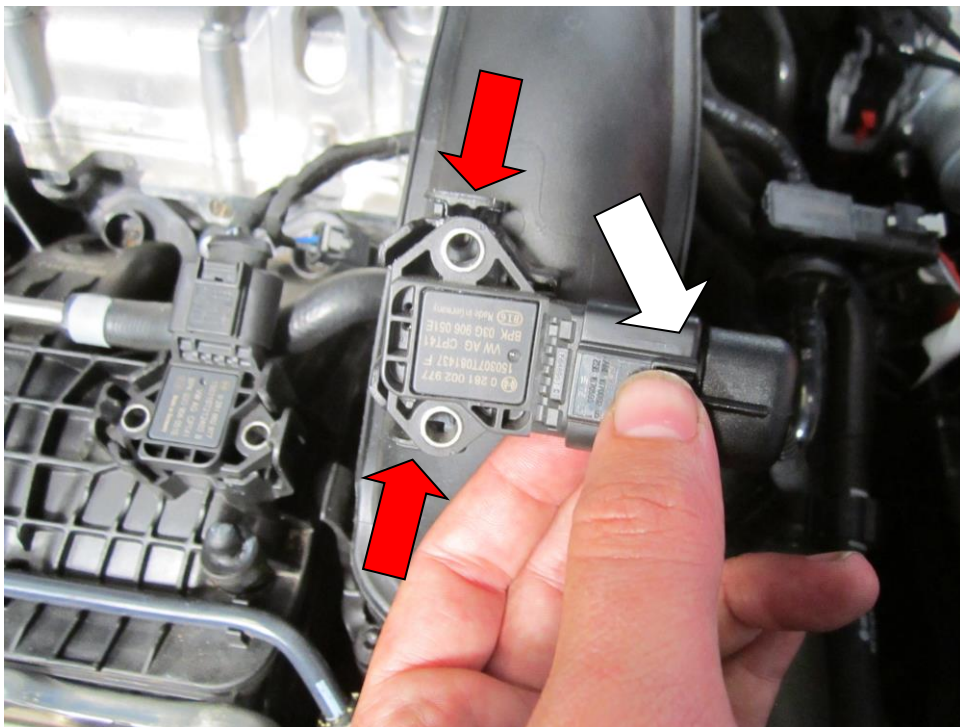


6. You can now unclip the boost pipe by prying open the tabs on the coupler joining the throttle body .

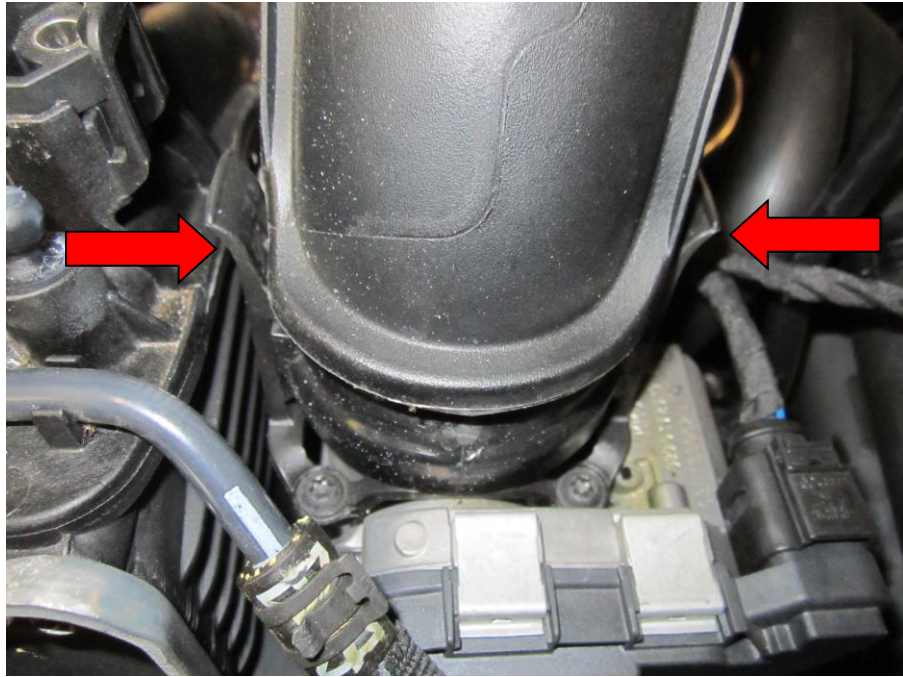


7. Unclip the opposite end of the boost pipe by again prying open the tabs arrowed red, then remove the boost pipe.

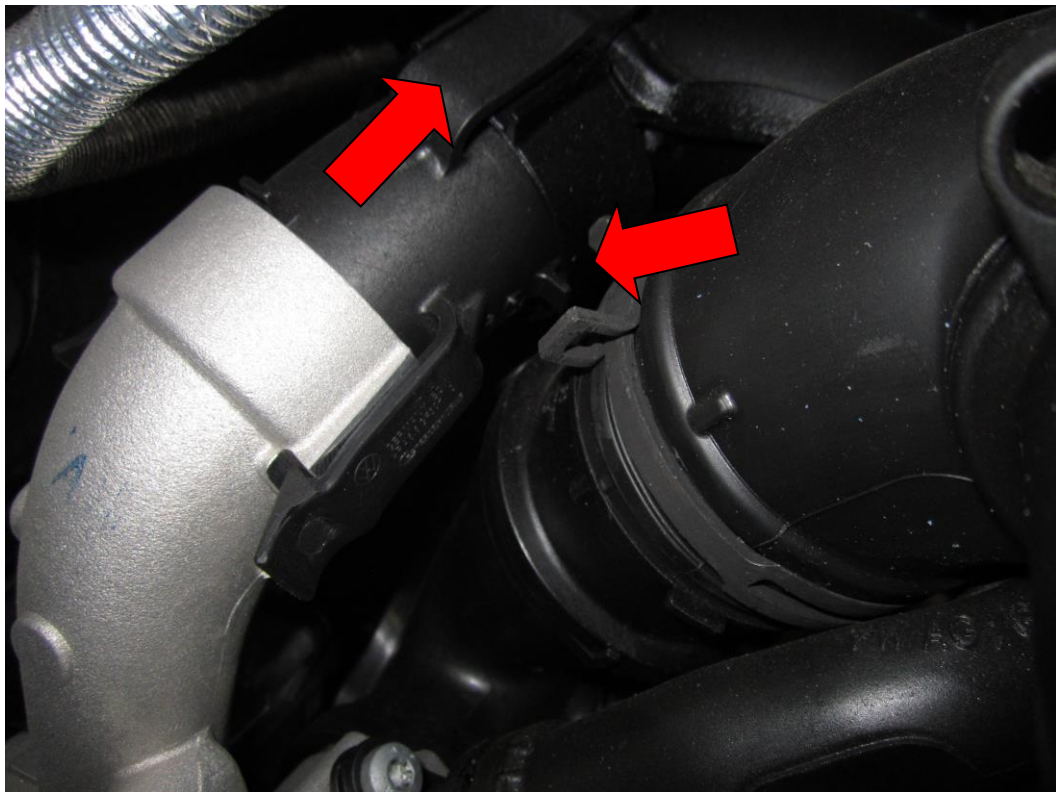

8. Insert the Forge coupler into position by pushing until you hear it click.

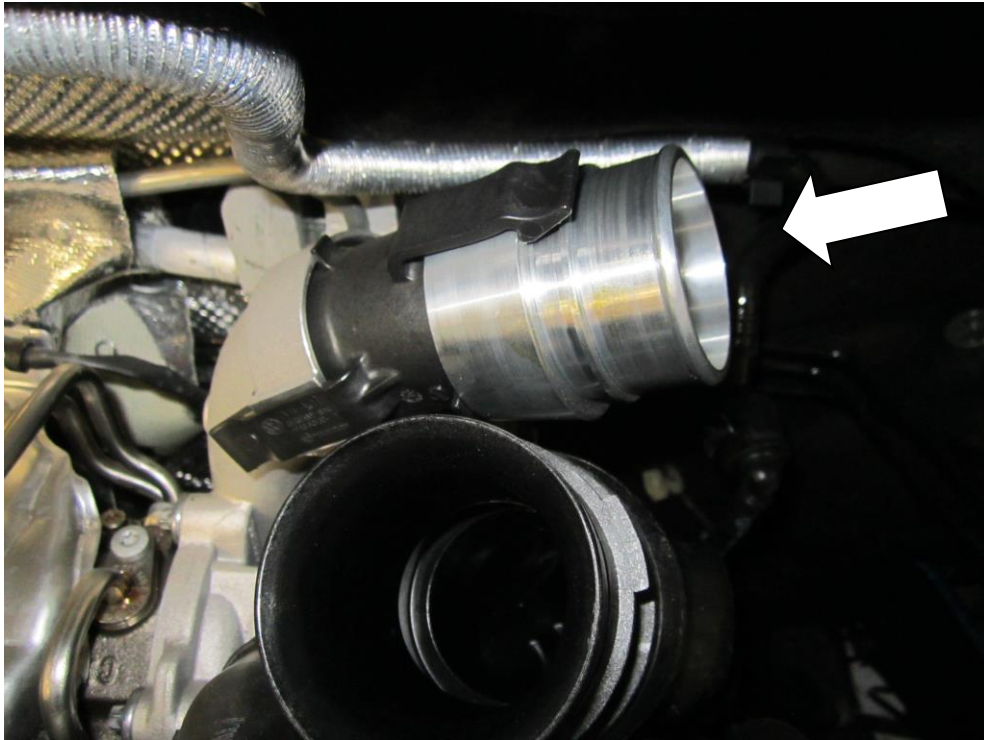

9. Now remove the OEM O-ring from the boost pipe and place it in the Forge throttle body coupler.

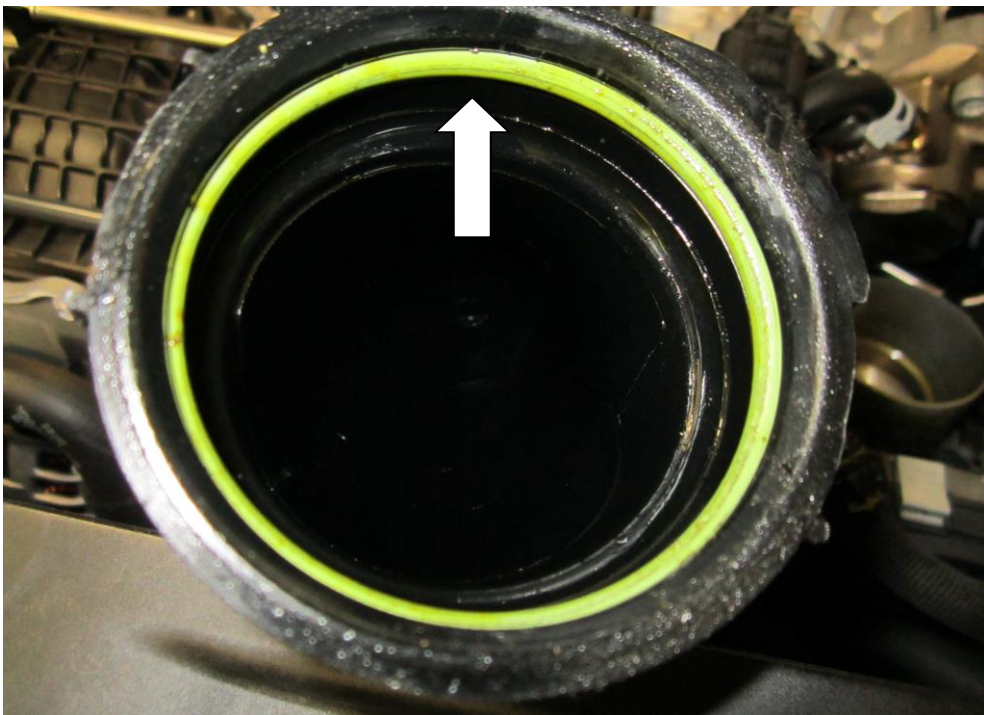


10. Place the o-ring in the groove of the Forge coupler indicated below.




11. Fit the Forge coupler into position, again pushing until you hear a click. Then using a 6mm allen key, fit the MAP sensor and connect the wiring loom.



12. Remove the MAP sensor that is mounted on the inlet manifold. Again pry the clips apart while pulling on the sensor.

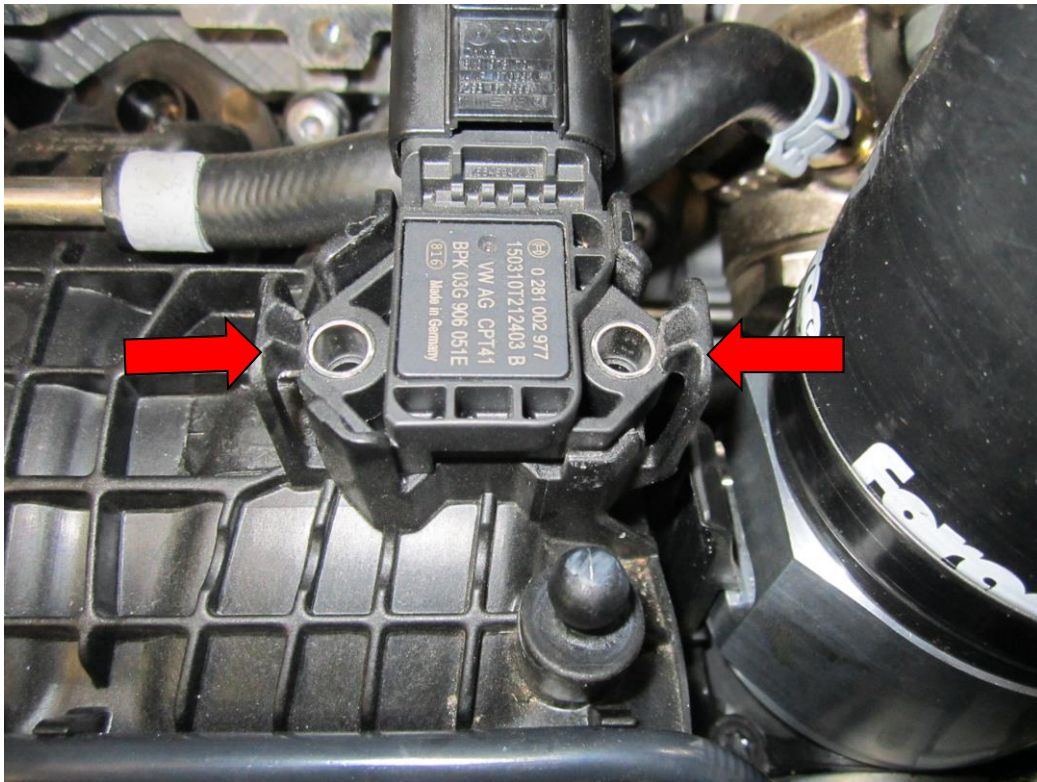


13. Now fit the airbox extender to the oem airbox mount then tighten with the 1.5mm allen key provided.

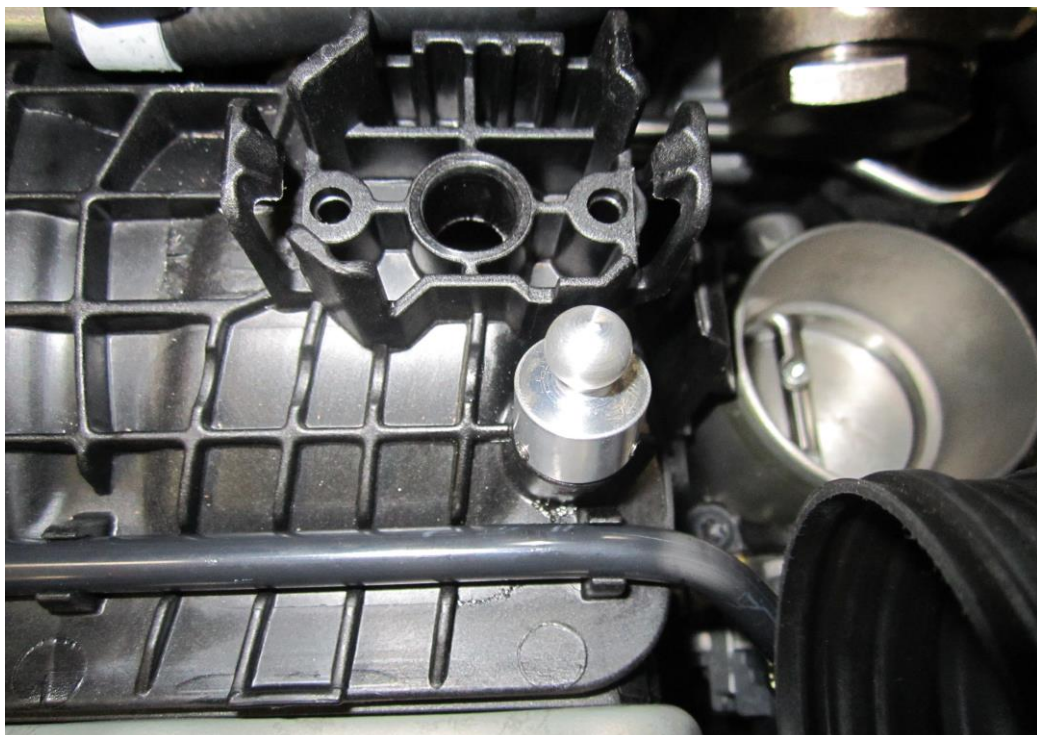

14. The boost source take off adapter must now be fitted to the inlet manifold, place the cork gasket in position first, now fit the adapter by pressing it down on top of the gasket until you feel it click into position.



15. Now fit the sensor on top of the adapter using the posi screws provided and tighten with a posi drive screwdriver.

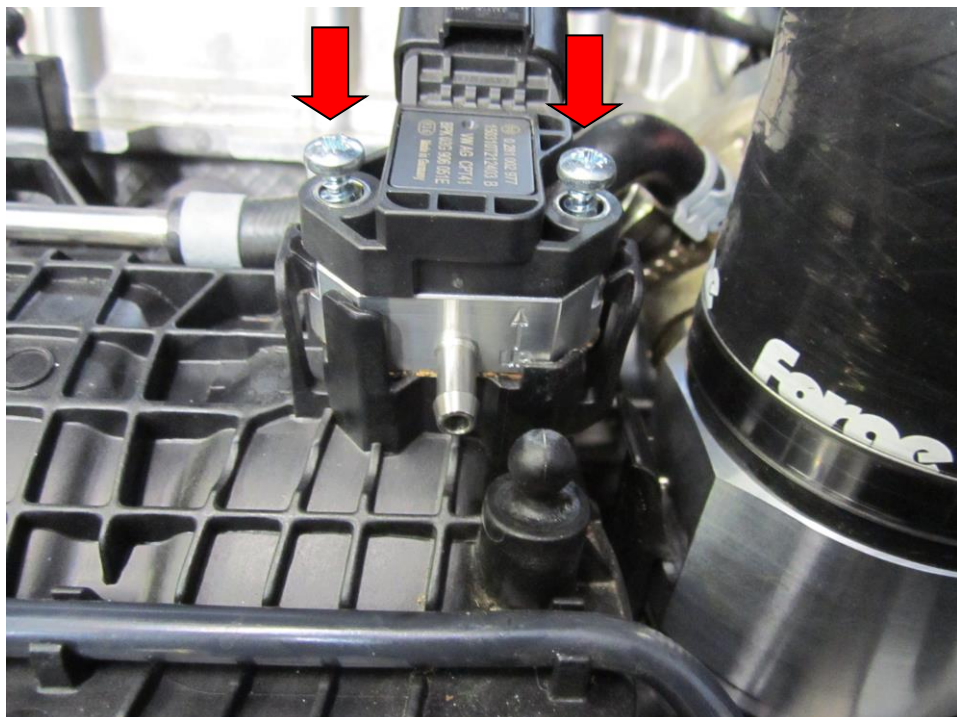


16. Fit the large silicon boost pipe into position and tighten the hose clamps with your hose clamp driver. Tighten the hose clamp at the small end first as this ensures the boost pipe is sat in the correct position .



17. Fit the new Forge Motorsport dump valve into the hose and tighten the hose clamp that holds it in position ensuring the cable tie is fitted to the electric cable to ensure it does not make contact with the valve as arrowed below.



18. Connect the vacuum pipe supplied from the top of the dump valve to the boost take off block you fitted in section 14. Using the cable ties provided, fasten the vacuum tube to the coolant pipe pictured and arrowed white.

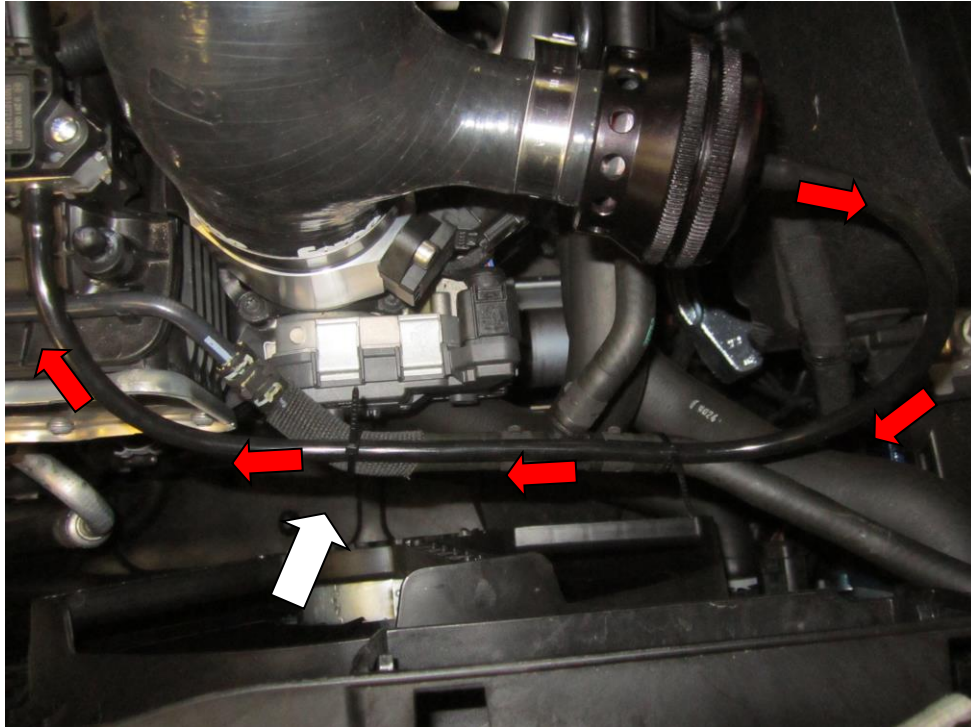

19. Follow steps 1-4 in reverse order to reassemble your air box .

20. Your vehicle is now ready for a test drive .



Check out WWW.FORGEMOTORSPORT.CO.UK and
WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.com



ENGINEERED FOR PERFORMANCE