



# FMTUBL4


## FITTING INSTRUCTIONS.

Please thoroughly read through and familiarize yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.


### TOOLS NEEDED:

M10 socket and suitable drive.

1. Remove the OEM heat shield and Lamda sensor.

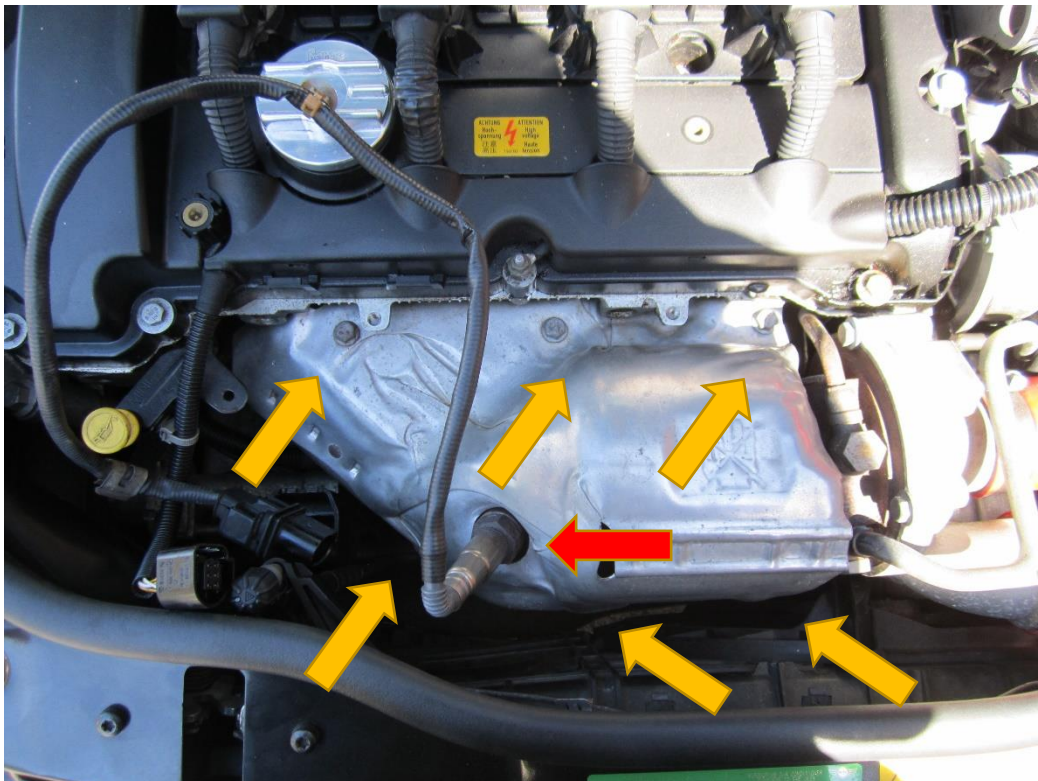

2. The new turbo blanket can now be fitted.

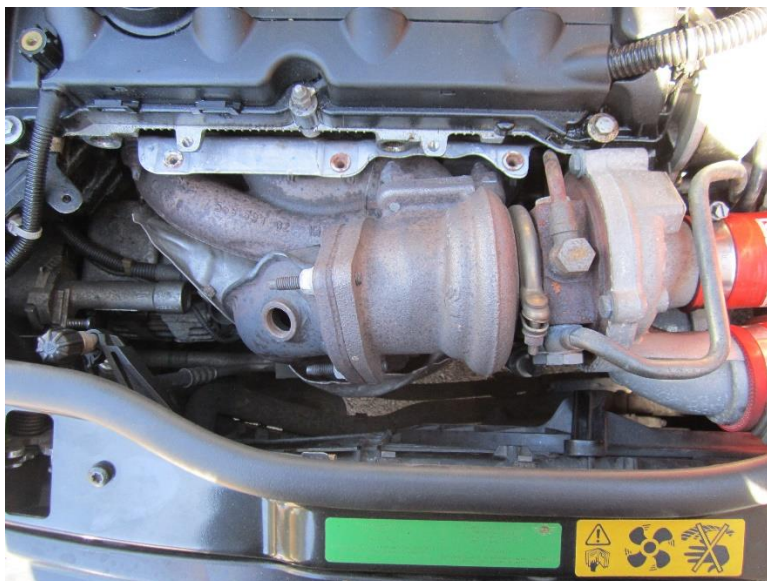

3. Tighten the OEM fasteners and refit the Lambda sensor.



Please note that a turbo blanket will lose its flexibility over the first few heat cycles as the material cures, so once fitted it should **not** be routinely removed as this can cause damage to the blanket.

Check out [WWW.FORGEMOTORSPORT.CO.UK](http://WWW.FORGEMOTORSPORT.CO.UK) and  
[WWW.FORGEMOTORSPORT.COM](http://WWW.FORGEMOTORSPORT.COM)

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / [info@forgemotorsport.co.uk](mailto:info@forgemotorsport.co.uk)

Forge Motorsport US – (407)-447-5363 / [sales@forgemotorsport.com](mailto:sales@forgemotorsport.com)