



FORD FIESTA ST 180 BOOST TAP INSTALLATION



Tools required:

5mm allen key /socket

T25 Torx Drive

1. Begin by removing your vehicles engine cover .To do this pull upwards sharply.
2. Locate the boost sensor (Fig 1.) and remove it using a T25 torx driver.

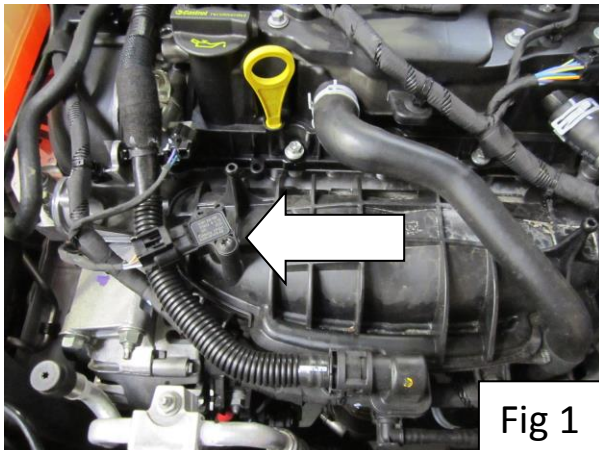


Fig 1

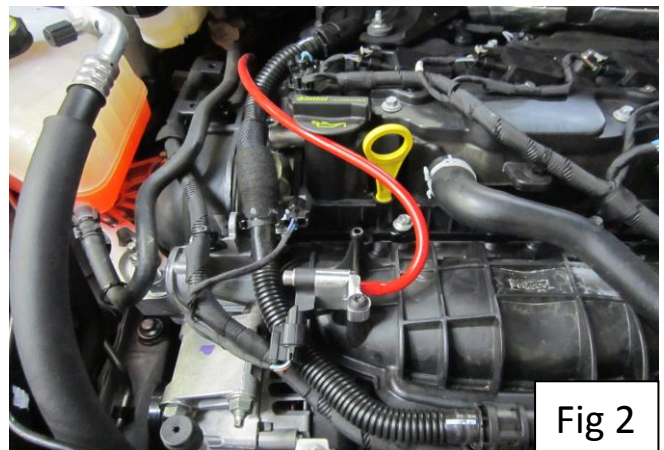


Fig 2

3. Fit the boost take off block supplied using the T25 torx screw. Fit the boost sensor using the supplied cap screw (Fig 2.)
4. Attach the vacuum line supplied that is red (*FOR ILLUSTRATION PURPOSES ONLY*) to the engine using the zip locks provided keeping it away from any hot sources or moving parts (Fig 2.)

We hope you enjoy your new found performance, please look at our other great performance enhancing products in our huge range of vehicle applications.



ENGINEERED FOR PERFORMANCE