




## Vw Polo GTI 1.4 TSI Twincharged Induction Installation Instructions



### **Tools Required:**

- T25 Torx driver
- T30 Torx driver
- Hose clamp driver


1. Remove the engine cover by pulling up on the front section until it comes out of the rubber grommets. Then pull it forwards to unhook it from the back.

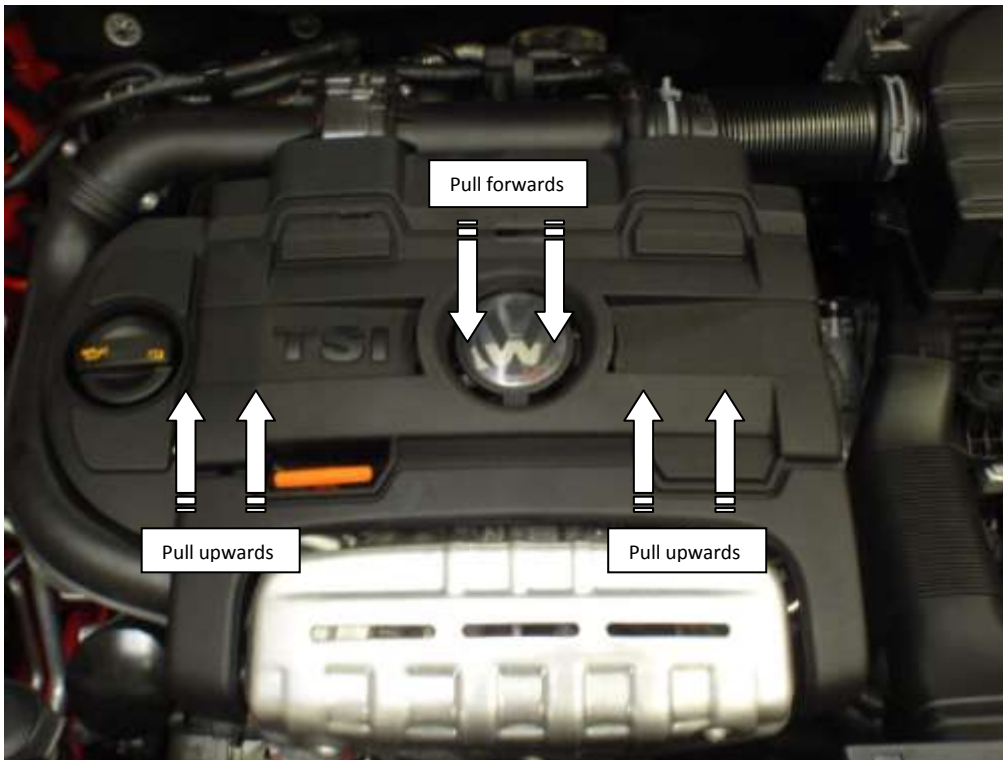

2. Using a T25 torx driver remove the two torx screws from the cold air duct going to the slam panel.




3. Unclip the flexible hose, pull off breather and remove. Unclip the cold air feed by pushing in the sides, Then pull out and remove. Undo the T30 screw and pull up the air filter box until it comes out of the rubber grommets and remove.

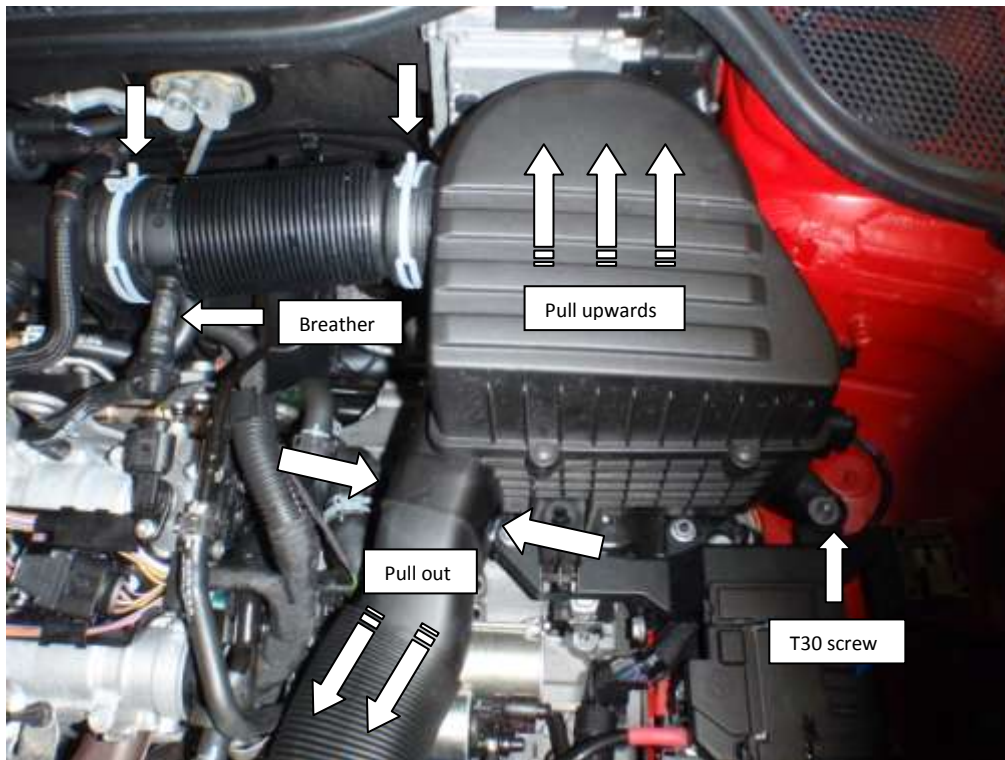

4. Fit the cold air scoop and screw in position using the original screws.



5. Fit the filter, hard pipe and silicon hoses as shown below. Reconnect the breather and tighten JCS clips installation is now complete.

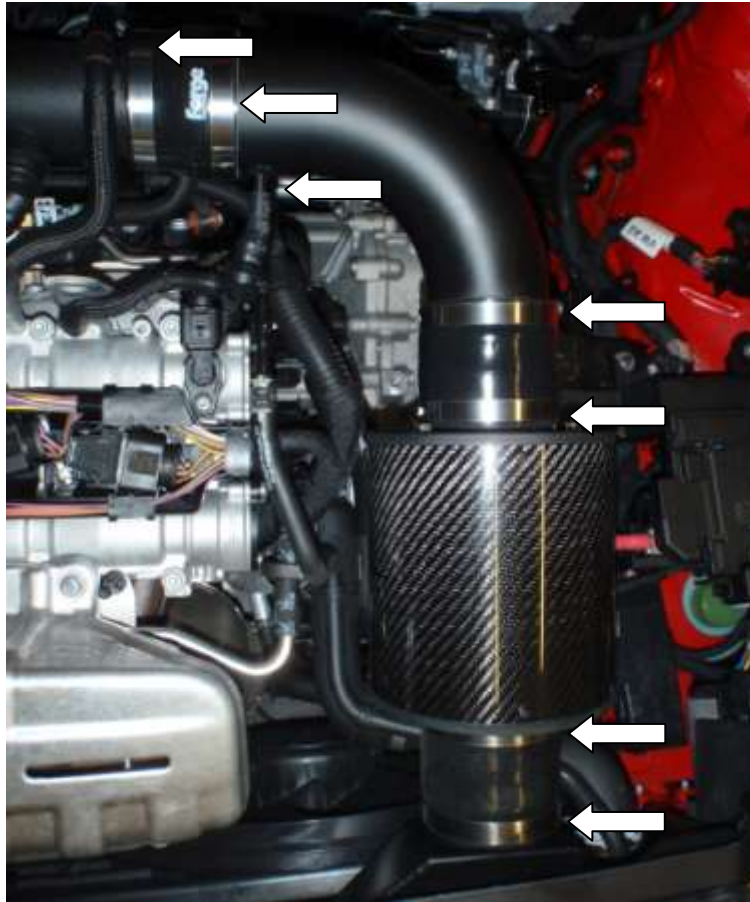

You may also be interested in these other Forge products for the Polo, available from your nearest Forge dealer:



- BOV (Recirculation, atmosphere)
- Intercooler (adds horse power and torque)
- Silicon hoses (longer life and durability)
- Braded brake lines (improves efficiency and strength)



**ENGINEERED FOR PERFORMANCE**

