



INSTALLATION GUIDE

CTS Turbo MK8 Golf GTI/8Y Audi A3 Turbo Inlet Pipe
CTS-HW-513



WHAT IS INCLUDED

1. CTS Turbo Turbo Inlet Pipe
2. Oring



NOTES

Vehicle used in this guide is a 2022 MK8 GOLF GTI.

Always make sure the car is safe to work on. Do not work on a hot motor.

STEP 1

Remove the engine cover.



STEP 2

Remove the clamp securing the intake pipe to the airbox.



STEP 3


Loosen the clamp on the intake pipe and remove.



STEP 4

Move the bolt and oring securing the stock turbo inlet pipe.

To remove turn the inlet pipe clockwise about 45 degrees and tip downwards so the top of the inlet pipe comes out first.

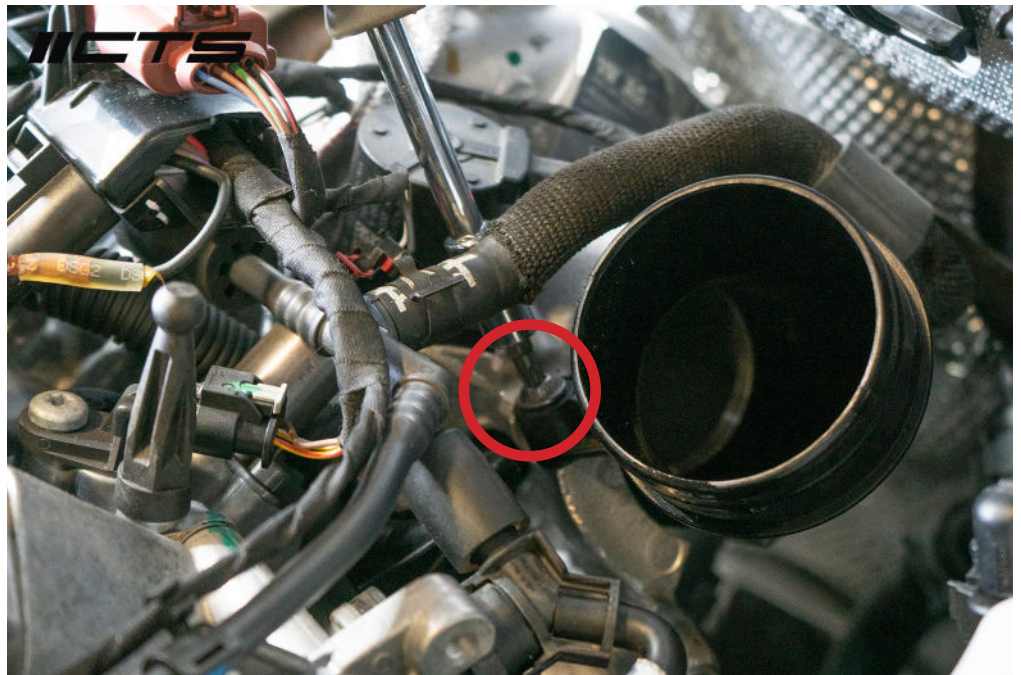

STEP 5


Install the provided oring on the CTS turbo inlet pipe.

Preinstall the OEM bolt and washer on the CTS inlet pipe.



STEP 6

Using the same procedure as removal. You need to get the bottom on the inlet pipe in first and bring it up to seat correctly and rotate into place.

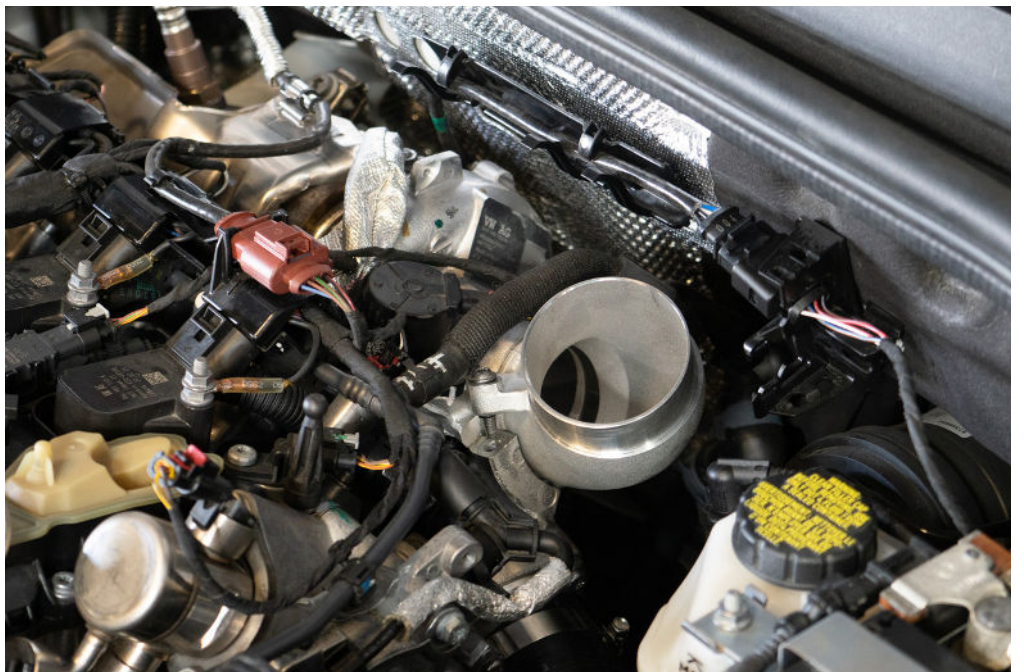

STEP 7

Tighten the bolt.

**STEP 8**

Reinstall the intake pipe and engine cover and you are done.

