


FITTING INSTRUCTIONS

HAND BUILT




Car	VW UP! GTI / UP! TSI	SVWC059
Year	2018-2024	512FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Pipe Diameter:- 76mm

Estimated Fitting Time: 2 Hours

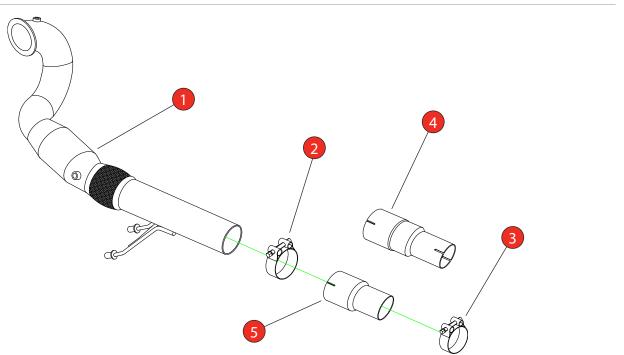

NO.	PART NO.	DESCRIPTION	QTY	DATE	21/05/2025
1	836VW	Downpipe With De-Cat	1	ISSUE	00
Fit Kit					G O'Shea
2	Z016.10064	63-68mm Clamp	1		
-		· · · · · · · · · · · · · · · · · · ·			
3	Z016.10002	51-55mm Clamp	1		
4	AD143	Adaptor (USE TO FIT TO O.E SYSTEM)	1		
5	AD144	Adaptor (USE TO FIT TO SCORPION GPF BACK SYSTEM)	1		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

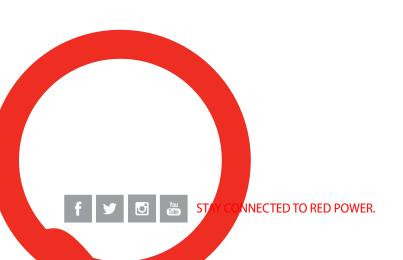







Car	VW UP! GTI / UP! TSI	SVWC059
Year	2018-2024	512FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Pipe Diameter:- 76mm



To fit this Scorpion system the original system needs cutting:

FITTING INSTRUCTIONS

HAND BUILT

Measure 70mm back from the front of the weld after the catalyst. Once cut de-bur the pipework as the Scorpion system fits over it.

Fit the system following the line diagram on the previous page. Once happy with fitment of Scorpion Exhaust, fully tighten up all clamps.



