

### KIT CONTENTS

NO.	DESCRIPTION	QTY	
1	3.5" Intake Pipe	1	<p><b>Please Check the Contents of this box immediately.</b></p> <p>Report any defective or missing parts to us or our dealer that you purchased this product form.</p> <p>Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.</p> <p>Installing does requires some mechanical skills.</p> <p>A qualified mechanic is always recommended.</p> <p>※Do not attempt to install the intake system while the engine is hot.</p> <p>The installation may require removal of radiator fluid line that may be hot.</p> <p>MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship.</p> <p>Warranty claims must be handled through the dealer from which the item was purchased.</p>
2	Heat Shield	1	
3	Heat Shield Cover	1	
4	M4 Bolt Kit	9	
5	M4 Bolt (12mm)	2	
6	Bracket	1	
7	M6 Bolt	1	
8	M6 Washer	1	
9	Alu Mount CNC	1	
10	83-89 Silicone Hose	1	
11	89-95 Silicone Hose	1	
12	3 3/4" Clamps	1	
13	4 1/4" Clamps	3	
14	Air Filter 89/115mm	1	

**\*All installation of parts must be performed by a trained professional.**





**Figure 1: Stock air box.**



**Figure 4: Disconnect the MAF sensor.**



**Figure 2: Remove the strut bar bolt.**



**Figure 5: Loosen the stock tube hose clamp.**



**Figure 3: Remove the strut bar.**



**Figure 6: Loosen resonance box bolt.**



**Figure 7: Remove stock air box.**



**Figure 10: Install the silicone hose.**



**Figure 8: Remove the stock hose.**



**Figure 11: Remove the trunk Screw.**



**Figure 9: Remove the stock turbo inlet pipe.**



**Figure 12: Loosen the bolt.**



**Figure 13: Install the alu mount.**




**Figure 16: Secure the heat shield breaket.**



**Figure 14: Install the MST heat shield.**



**Figure 17: Install the trunk Screw.**

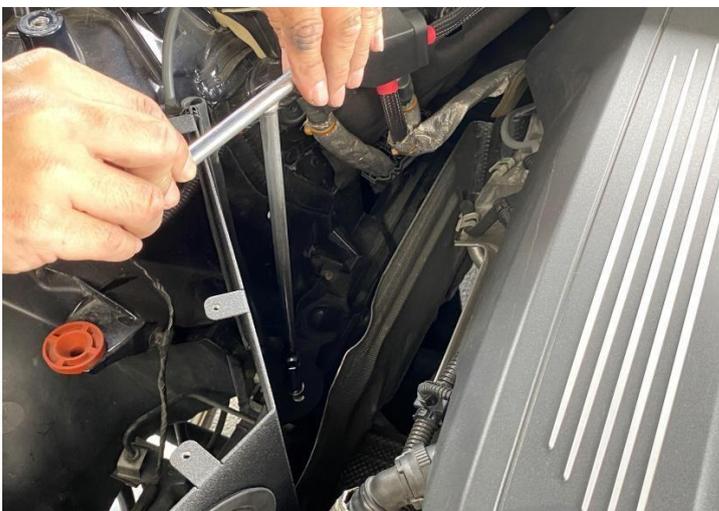

**Figure 15: Secure the heat shield breaket with bolt.**



**Figure18: Removethemassairflowsensorfromthe stock air box.**



**Figure 19: Install stock mass air sensor into the intake pipe and secure the m4 bolt.**



**Figure 22: Install the MST air filter.**



**Figure 20: Install the MST intake pipe.**



**Figure 23: Install the MST heat shield cover and secure with a screw.**



**Figure 21: Plug in the mass air flow sensor connector.**



**Figure 24: Install the stock strut bar.**



**Figure 25: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.**